

Projection In BOO-4610

Priscilla Nascimento (Student Employee) - 2025-01-15 - AV and Projection

Overview:

We now have an AV Switch to allow users to use either the teacher station or their laptop.

DO NOT REMOVE ANY OF THE CABLES.

DO NOT UNPLUG THE AV SWITCH.

Using the AV switcher:

For each of the output sections (**OUT 1 / OUT 2 / OUT 3**):

- Set **IN1** for **Teacher**
- Set to **IN2** for **Laptop** (laptop must be connected)



Figure 1: Front of the switcher. View shows input settings for using the TEACHER station. Press the round black button in each output section to switch to different inputs.



Figure 2: Top view of the switcher. DO NOT CHANGE ANY OF THE CABLES!

On the Teacher Station, choose which display will be mirrored to the TV:

Go to **Settings / System / Display**

- Use **Extend desktop to this display** to keep the Wacom display separate from the rest of the displays (default)
- Use **Duplicate these Displays** to mirror the Wacom out to the TVs and the teacher display.

If you are still running into any issues, please submit a ticket to <https://helpdesk.cad.rit.edu>